


FIXING IN ACCORDANCE WITH THE MANUFACTURERS
PRINTED INSTRUCTIONS, BS5534 PART 1 2014,
BS8000 PART 6 2013 AND H62/210 AND 275

FULL LENGTH SLATES
UNDER-EAVES BATTEN
SHORT SLATE COURSE

EAVES VENTILATION

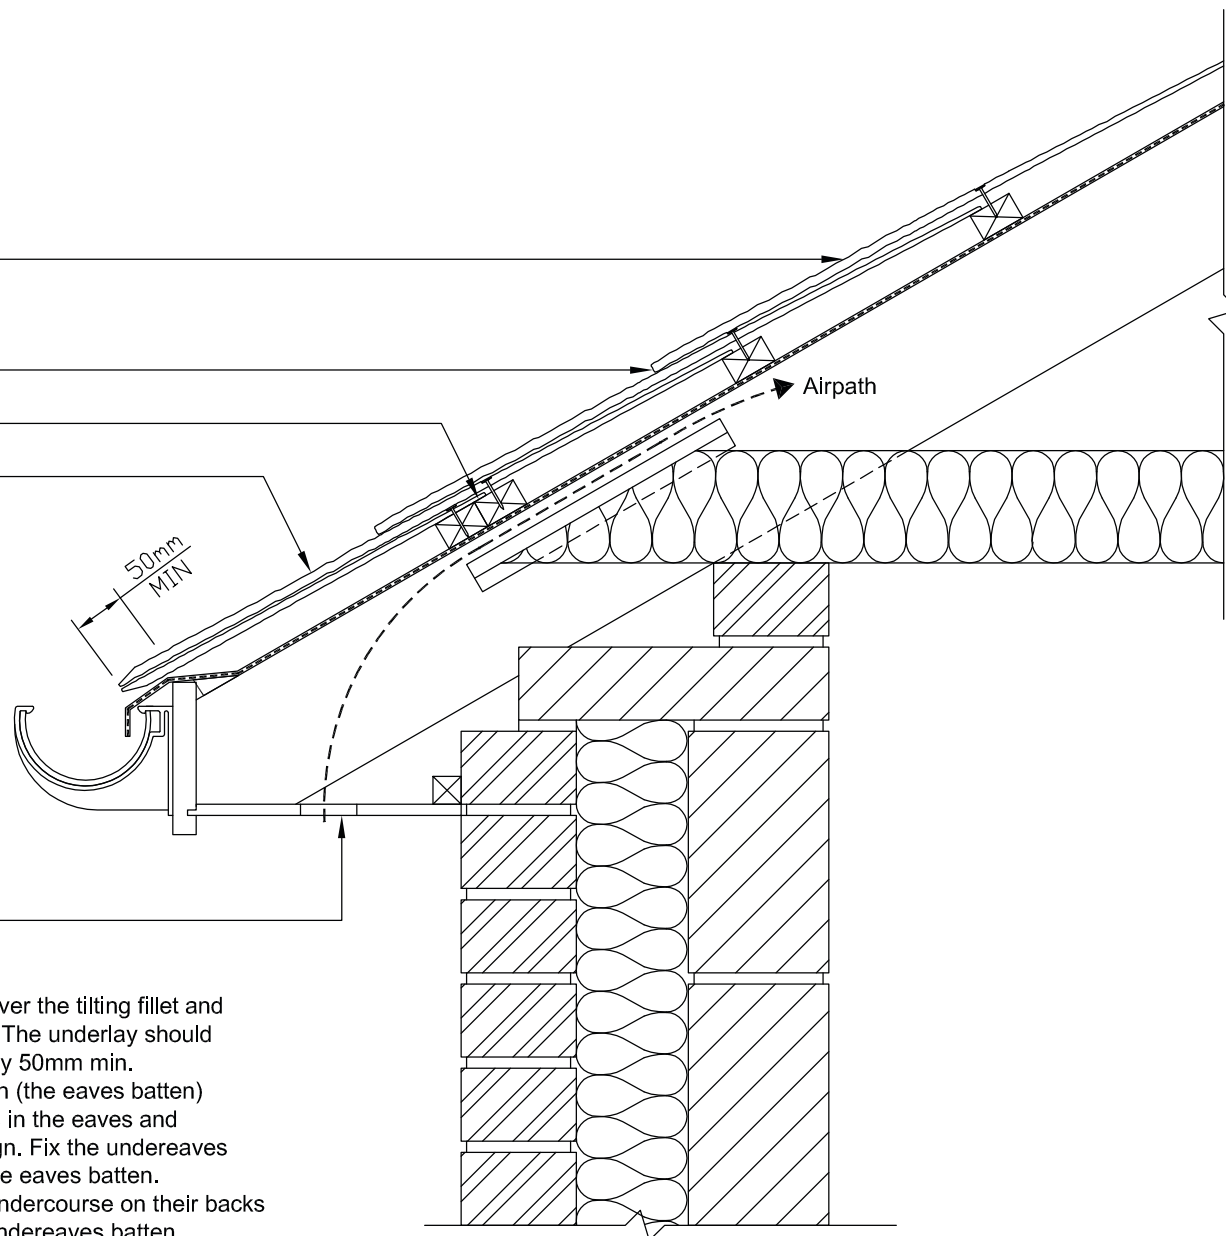

1. Fix the underlay to extend over the tilting fillet and fascia board into the gutter. The underlay should overhang the fascia board by 50mm min.
2. Fix the first full course batten (the eaves batten) so that the tails of the slates in the eaves and the undereaves courses align. Fix the undereaves batten immediately below the eaves batten.
3. Lay the slates forming the undercourse on their backs and head-nail them to the undereaves batten.
4. Fix the eaves course with the tails of the slates aligning with the tails of slates in the undereaves course.

SSQ NATURAL SLATE
TYPICAL EAVES DETAIL
500X250 DEL CARMEN, ULTRA GRADE (NATURAL SLATE)
DRG 001