


FIXING IN ACCORDANCE WITH THE
MANUFACTURERS PRINTED INSTRUCTIONS,
BS5534 PART 1 2014, BS8000 PART 6 2013
AND H62/210 AND 275

HIP SLATES INTERLEAVED WITH LEAD SOAKERS
NAILED TO BATTENS AT TOP EDGE

600mm WIDE OVERLAY TO
SARKING FELT

HIP RAFTER

NB. FOR ROOF PITCHES OF UNDER 30°
CONTACT SSQ TECHNICAL

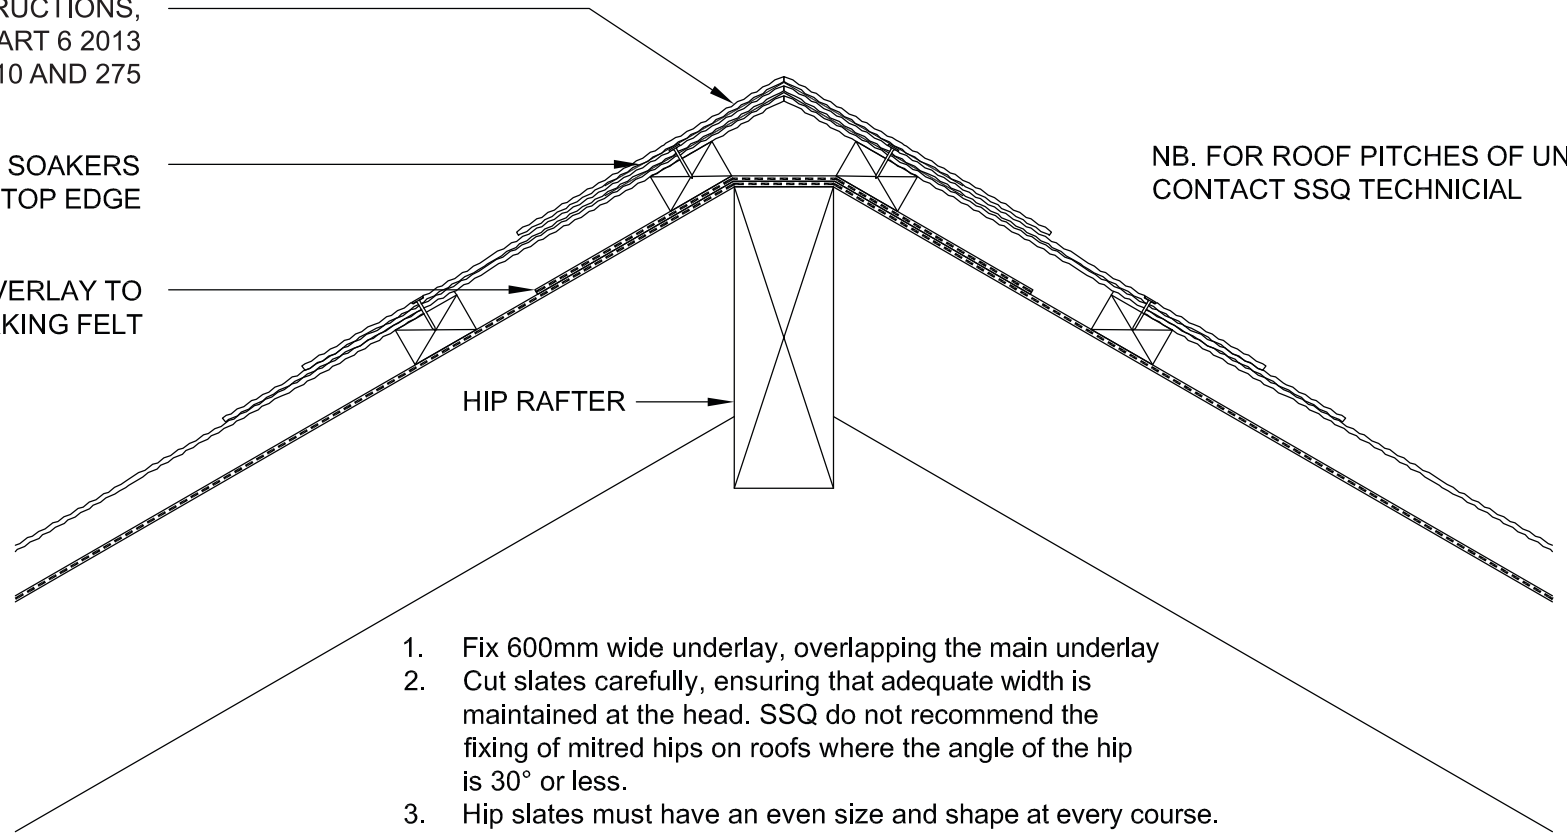

1. Fix 600mm wide underlay, overlapping the main underlay
2. Cut slates carefully, ensuring that adequate width is maintained at the head. SSQ do not recommend the fixing of mitred hips on roofs where the angle of the hip is 30° or less.
3. Hip slates must have an even size and shape at every course.
4. Fix hip slates interleaved with lead soakers - nailed to battens at the top edge - to provide a watertight close-mitred joint.
5. Cut slates of adequate width to connect with main roof slates and hip slates. The slate nearest the hip slate must remain a full slate.

SSQ NATURAL SLATE
TYPICAL MITRED HIP DETAIL
500X250 DEL CARMEN, ULTRA GRADE (NATURAL SLATE)
DRG 003