


RIDGE TILES JOINTED AND BEDDED IN MORTAR

TOP COURSE MAINTAINING LAP

SHOULDERED COURSE

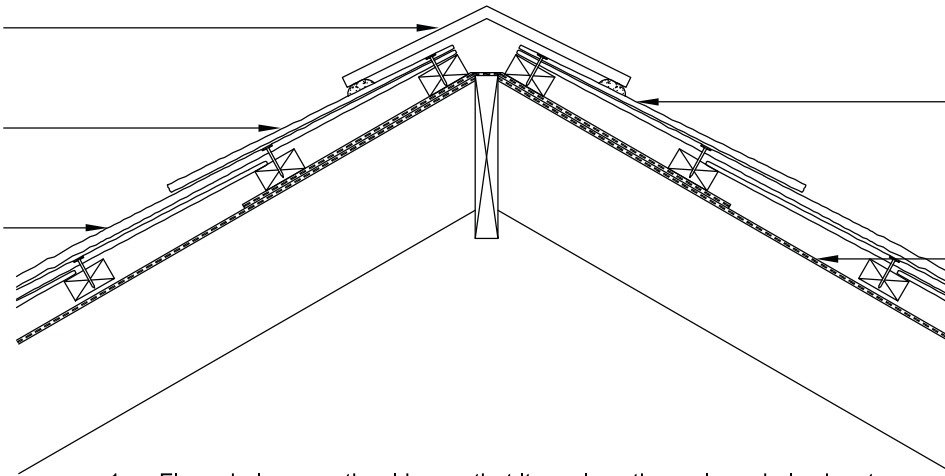

FIXING IN ACCORDANCE WITH THE MANUFACTURERS
PRINTED INSTRUCTIONS, BS5534 PART 1 2014,
BS8000 PART 6 2013 AND H62/210 AND 275

UNDERLAY LAPPED 150mm

1. Fix underlay over the ridge so that it overlaps the main underlay by at least 150mm. When using ventilated ridges, a gap of 50mm should be allowed between the top of the underlay of each pitch.
2. Fix the top course of slates to maintain gauge.
3. Lay ridge tiles true. Joint ridge tiles in mortar and firmly bed the edges along the roof slope in mortar. Where ridge tiles meet, squeeze up the bedding to fill the joint and strike it off smoothly; no separate pointing is necessary.
4. Fill the ends of the ridges at the gables with mortar and slips of slate finished flush with the tile.

SSQ NATURAL SLATE
TYPICAL RIDGE TILE DETAIL
500X250 DEL CARMEN, ULTRA GRADE (NATURAL SLATE)
DRG 012



EXCLUSIVELY NATURAL SLATE